




# 2700 TOP SASH REMOVAL

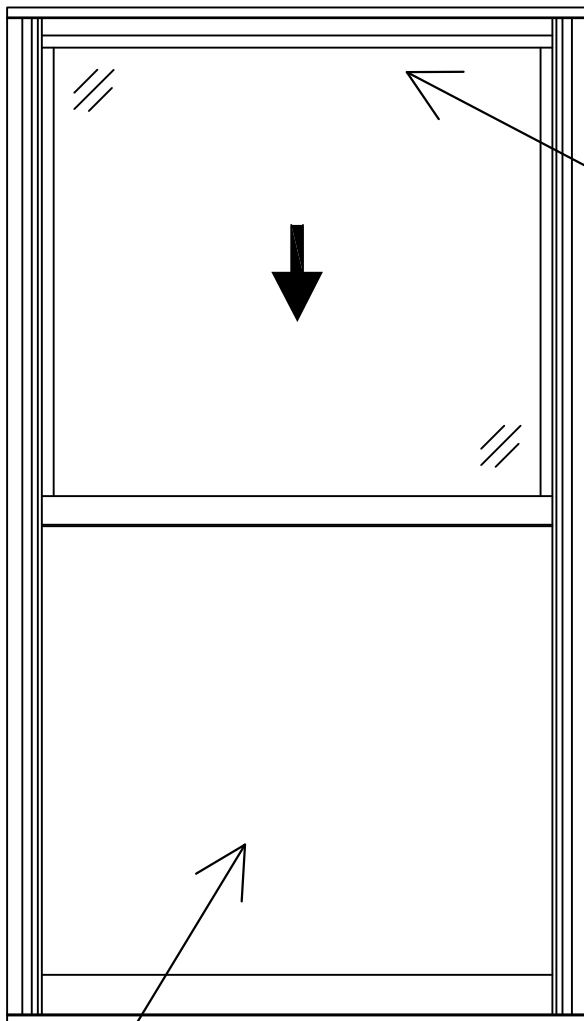


1. REMOVE BOTTOM SASH

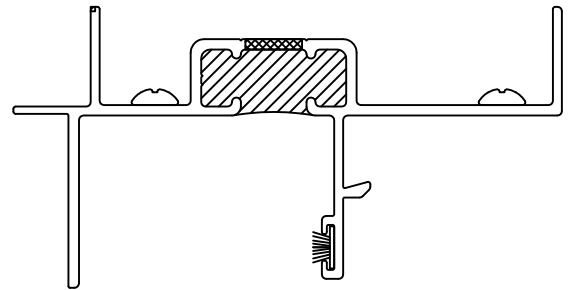

2. PULL TOP SASH DOWN UNTIL ANTI-BOW HOOKS CLEARED OFF

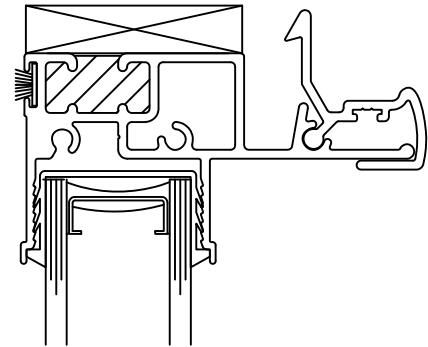


3. SQUEEZE TILT LATCHES IN, TILT SASH A LITTLE, PULL SASH UP


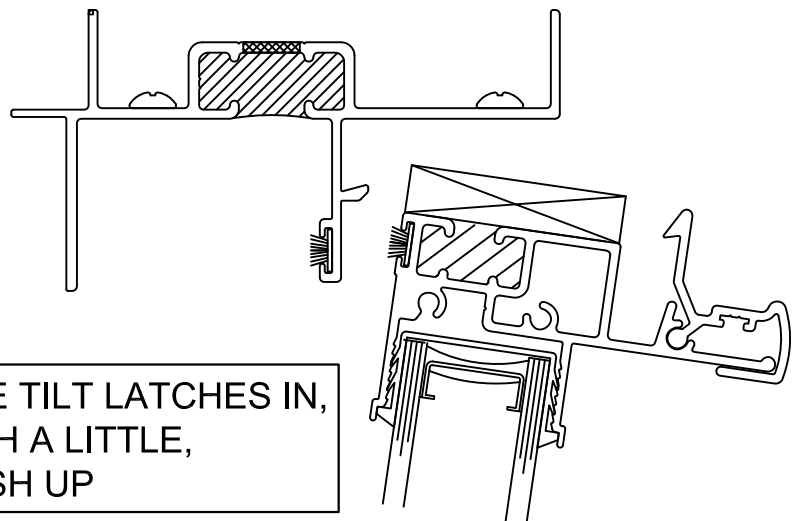


# 2700 TOP SASH REMOVAL

4. TILT SASH IN BY 90 DEGREES

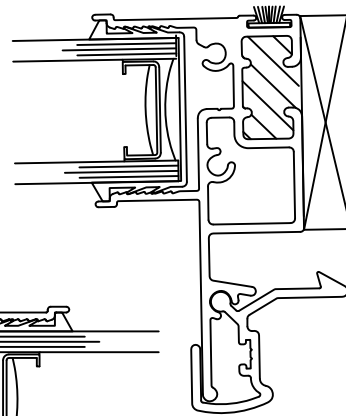

5. LOOSEN UP PIVOT BAR SCREW  
ON **RIGHT SIDE FROM INTERIOR**,  
**SLIDE PIVOT BAR IN**

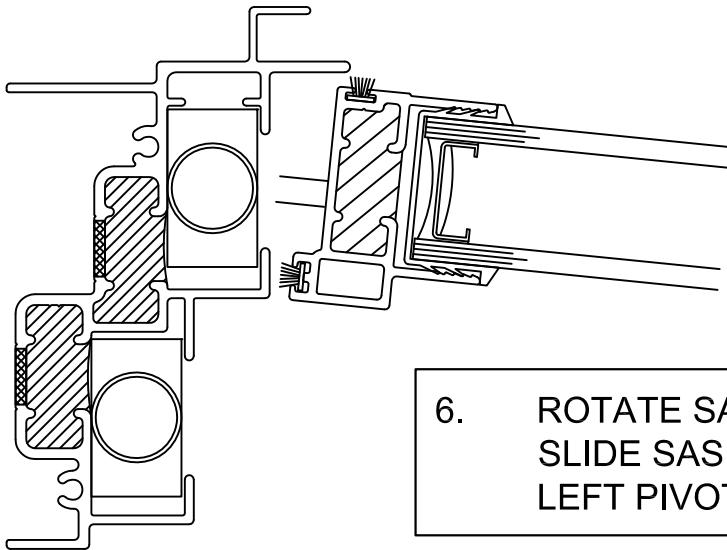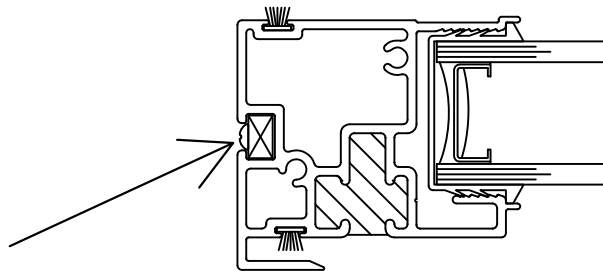

6. ROTATE SASH CLOCKWISE A LITTLE,  
SLIDE SASH TO THE RIGHT TO CLEAR OFF  
LEFT PIVOT BAR

7. INSTALL TOP SASH BACK IN THE OPPOSITE  
ORDER OF OPERATIONS